

Order Package - Doors

Use the following guide when making selections for your order.

Step 1: Choose the wood species



Alder/Knotty Alder



Birch



Cherry



Hickory/Knotty Hickory



Knotty Pine



Paint Grade



Red Oak



Soft Maple



Walnut



White Maple

Step 2: Choose the series shape



A - Square



B - Cathedral



C - Small Arch



D - Big Arch



E - French Cathedral

 


F - Slab



G - Mission

Step 3: Choose the stile & rail profiles



1 - 261



#3 & 3A (no bridge)
SHAKER



 
4 - Shaker Bevel



4V - Shaker V-Groove



5 - 267



6 - 265 Recessed



7 - 266



8 - 268



 
9 - 269



10 - 264



11 - 262



#12 & 12A (no bridge)
Shaker Slant



#13 & 13A (no bridge)
30 BEVEL (NEW!!)




14 - 20 Degree Bevel




#16
268A Wide Step Shaker (NEW!!)

Order Package - Doors

Step 4: Choose the insert profile

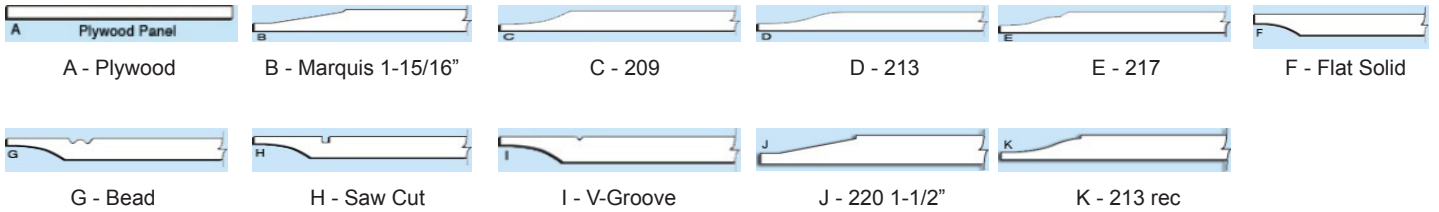

Step 5: Choose the outside profile

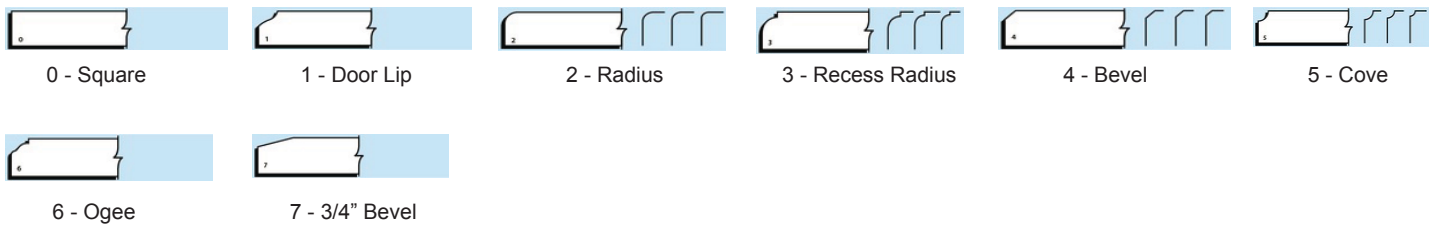

Order Package - Drawer Fronts

